

Oven Mitt Tutorial

Materials Needed:

All Measuring 11 x 16

- Outer Fabric
- Lining Fabric both from [Beggar s Bounty by Patrick Lose](#)
- Warm & White® cotton batting
- Insul-Bright®
- Binding pieces in choice fabric 2 strips of 3 x 10
- Steam-A-Seam 2 ¼ tape
- Water soluble marker or chalk
- Thread, sewing machine, scissors and ruler


Step 1. Cut your materials 11 x 16 and layer in this order:

Outer Fabric, Right side down → Warm & White® → Insul-Bright® → Lining Fabric, Right side up




Oven Mitt Tutorial

Step 2. Trace and cut out stencil from pattern (onto card stock/ old file folder/ cereal box).

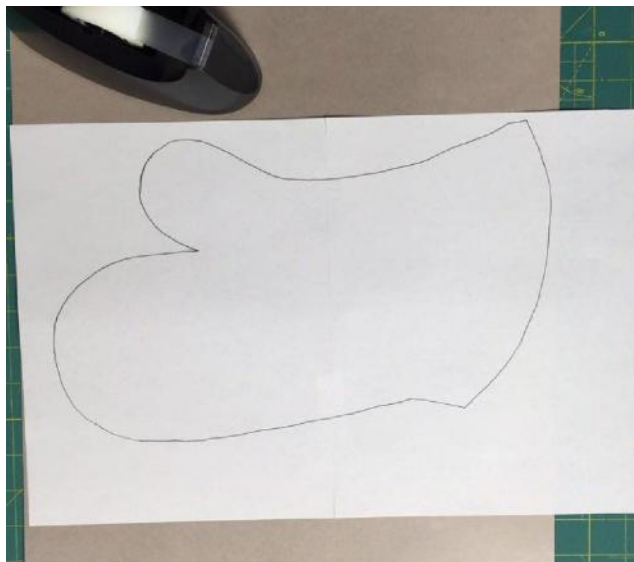

Step 3. Use your stencil to trace pattern onto the lining fabric (using a fabric pen). Then, reverse stencil and trace again onto lining fabric from the other stack. Make sure the two are mirrored.

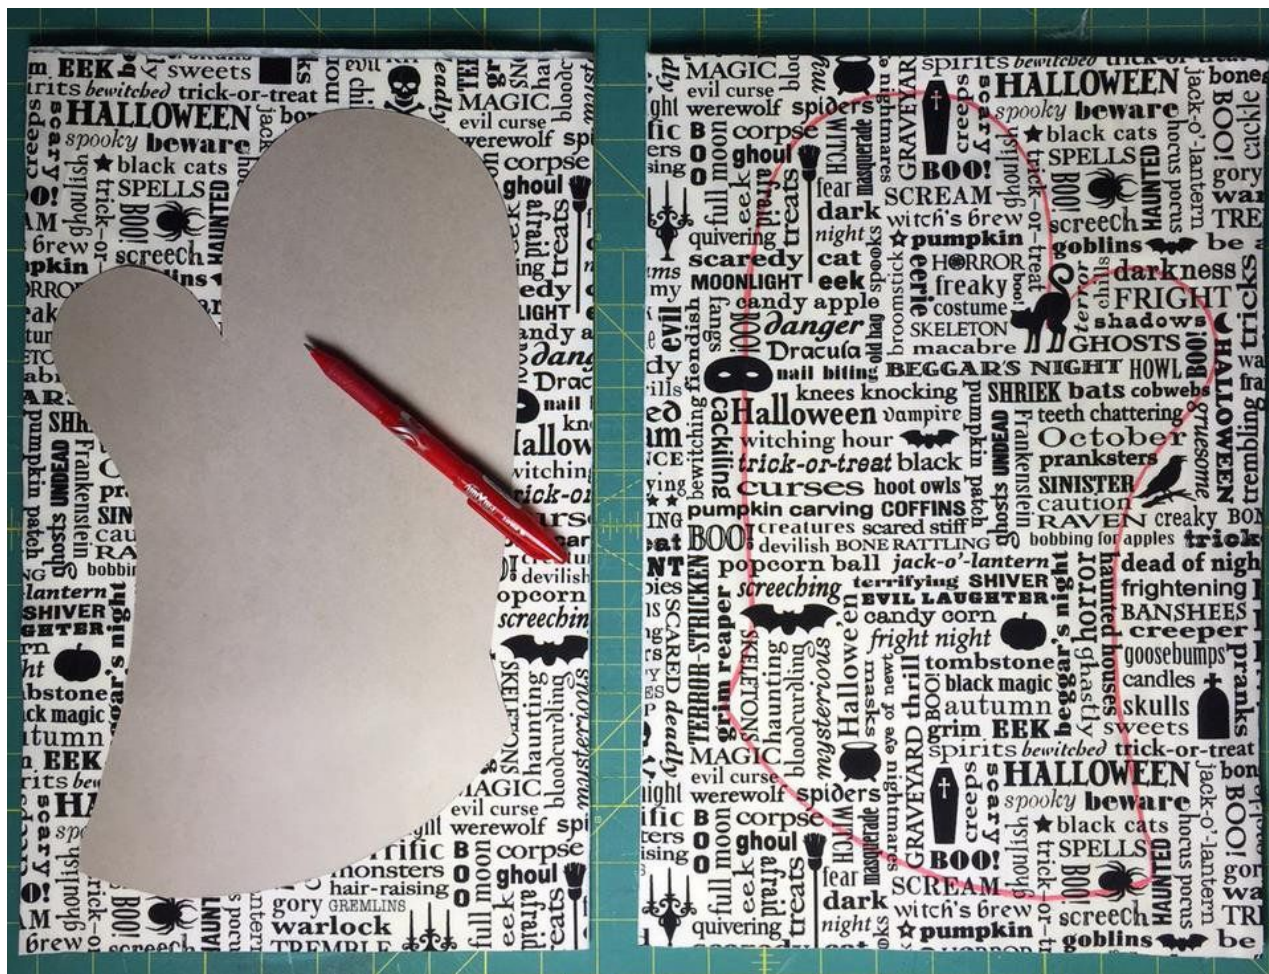


Oven Mitt Tutorial



Then Mark your quilting pattern. Visit our website to view our collection of quilting patterns.
www.warmcompany.com/creative.asp.

Oven Mitt Tutorial

Step 4. Quilt through all fabrics along the quilting pattern using decorative stitching to hold all layers together. Straight stitch along oven mitt trace line. Trim away excess fabric from outside of the stitching.

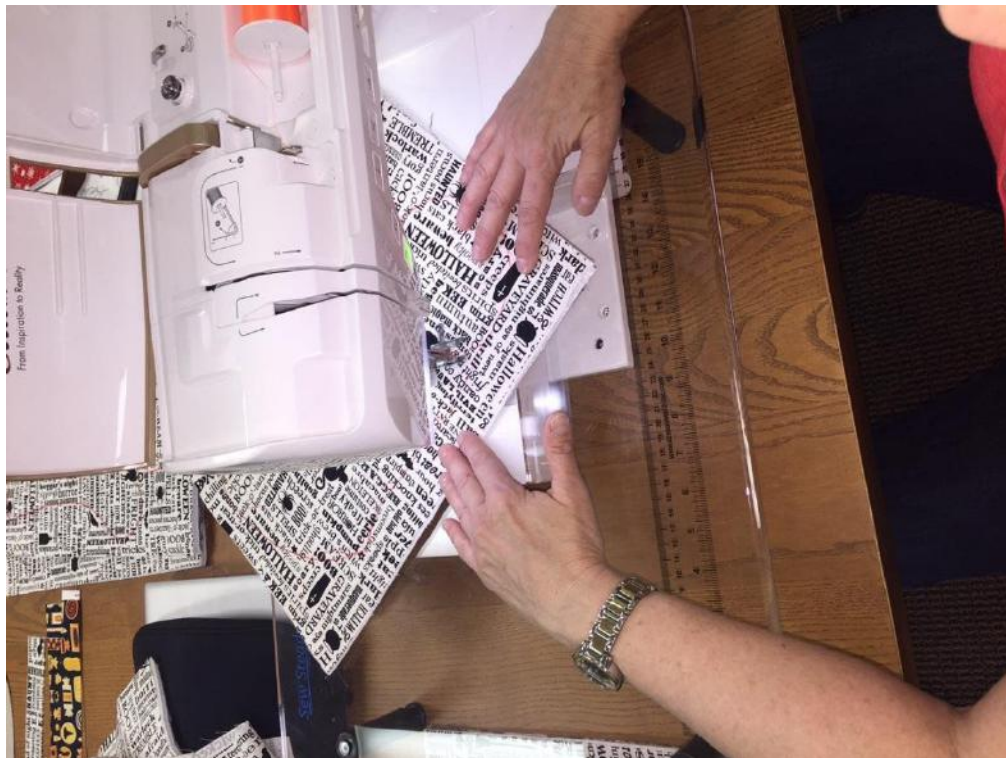

Oven Mitt Tutorial

Step 5. Add bindings – fold and press fabric in half. Line up the raw edges on the right side of oven mitt. Straight stitch using a $\frac{1}{4}$ seam allowance. Then, flip binding over to the inside of the mitt and fuse permanently in place using $\frac{1}{4}$ Steam-A-Seam 2 tape.



Oven Mitt Tutorial

Step 6. Lay the sets of fabric together with lining fabrics facing out. Stitch around all edges EXCEPT the cuff edge. Trim away excess fabric from edge.



